

Technical data sheet


Special rinse aid

B 220 e

Environmentally friendly, acidic highly concentrated rinse aid for all areas of application

AREA OF APPLICATION:

- Suitable for professional glasswashers, front loading dishwashers, rack pass-through warewashers, rack conveyor warewashers, flight-type dishwashers and utensil washers.
- Suitable for dishes made of glass, porcelain, plastic, stainless steel and aluminium as well as cutlery and equipment.
- Especially suitable for poorly wettable dishes made of stainless steel and plastic, such as reusable cups, transport boxes, trays and insulating systems.
- Especially suitable for all water hardnesses.

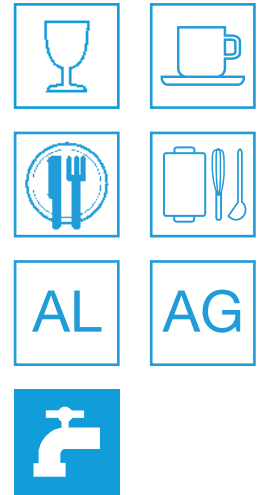

For perfect cleaning results, we recommend using the Winterhalter system with an appropriate dishwasher, water treatment and rinse aids.

DOSAGE:

With automatic dosing equipment, depending on the degree of soiling and the water quality. Having the rinse aid dosing set on-site by Winterhalter customer service assures perfect rinse aid results.

Water quality	Dosage in ml/l	°dH	[µS/cm]	ppm CaCO ₃
Osmosis	0.1-0.4	0	0	0
Soft	0.1-0.4	0-8	0-240	0-142
Medium	0.1-0.4	8-14	240-420	142-249
Hard	0.1-0.4	> 14	> 420	> 249


INGREDIENTS:

Non-ionic tensides, preservatives



PRODUCT ADVANTAGES:

- Universal, highly concentrated
- Certified with the EU-Ecolabel
- Excellent dish wetting
- Very good draining
- Spotless drying
- Brilliant shine
- Optimal limescale binding formula
- Ensures beer foam stability

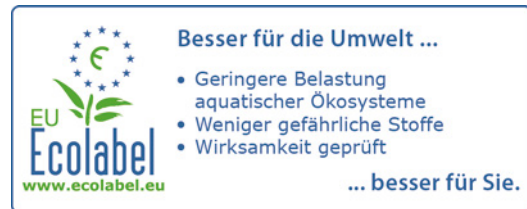

Technical data sheet

Special rinse aid

B 220 e

DELIVERY SIZES:

5 l	PE-drum
10 l	PE-drum

TECHNICAL DATA:

Colour	colourless
Odour	product-specific
pH value	approx. 3 (concentrated)
Shelf life	24 months
Storage conditions	cool, dark, frost-free to max. 30 °C
Density	approx. 1.04 g/cm ³



SAFETY NOTES:

H319	Causes serious eye irritation.
P280	Wear protective gloves/protective clothing/eye protection/face protection.
P305+P351+P338	IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.
P337+P313	If eye irritation persists: Get medical advice/attention.
P501	Disposal in accordance with local regulations.
EUH208	EUH208 Contains 1,2-benzisothiazol-3(2H)-one, 1,2-benzisothiazolin-3-one. May produce an allergic reaction.

DISPOSAL OF EMPTY PACKAGING:

- Completely emptied packaging is recyclable and can be disposed of by the end user through the DSD (Duales System Deutschland GmbH).
- Information on disposal of product residues can be found in the safety data sheet.

IMPORTANT:

- EU Ecolabel: DE/038/019
- For optimum washing results, we recommend using this product in Winterhalter warewashing machines in the system with Winterhalter all-purpose rins aid F 420 e.
- Product is not intended for the general public. For commercial use only!
- Storage and transport permissible only in original packaging in upright position. Do not expose to direct sunlight. Protect from freezing.
- B 220  can be used in connection with all customary detergents for commercial dishwashing machines and is suitable for the food sector.
- A filling funnel (60 005 163) for safe and exact filling of the built-in rinse aid container in Winterhalter-UC-models is available. To avoid confusion, rinse aid B 220  may only be filled in containers marked rinse aid.
- Never mix with other products and do not refill in other containers, bottles etc.!
- Containers, pipes and dosing equipment should be rinsed with fresh water before changing products.
- Colour variations in the product are caused by raw materials and storage and do not affect quality.
- The washing parameters should be kept in accordance with the DIN guidelines (DIN 10510 to 10512 and DIN 10522). Information of Working Party of Commercial Dishwashing should be kept in mind. In context refer to: www.akggs.de
- You will find this product's safety data sheet, technical data sheet and sample operating instructions on our homepage at www.winterhalter.biz